


KIENE Model 52 Differential Rebuild Stand

INSTRUCTIONS FOR USE

CAUTION: Before attempting to use this device, read and understand these instructions.

1. Before mounting components on the Model 52 stand, it must be bolted securely to the floor, using all four mounting holes.
2. Loosen the Clamp Arm Bolts. Move the Clamp Arms towards the Uprights.
3. Using a crane or suitable lifting device, support the differential between the Uprights. Move the Clamp Arms into position and bolt securely to the differential mounting flange.
4. Tighten BOTH Clamp Arms Bolts securely.
5. Lower the crane slightly to transfer load to the Model 52 stand. Before releasing the load completely, check that the differential is securely supported by the stand.
6. To rotate the differential on the stand, first support the heavy end of the differential using a crane or suitable lifting device. Then, loosen the Clamp Arm Bolts. Rotate the differential to the desired position and tighten BOTH Clamp Arm Bolts.

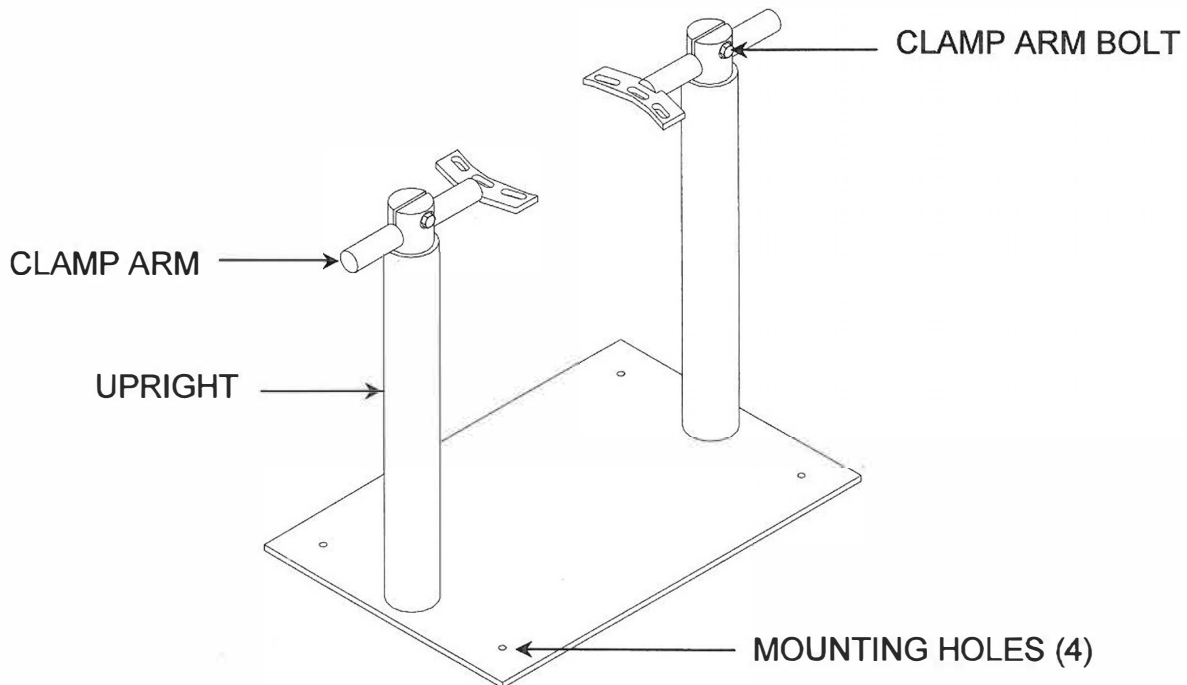

KIENE
DIESEL ACCESSORIES, INC.

UNIQUE
TRUCK EQUIPMENT

WWW.UNIQUETRUCK.COM
616-531-8868